





Scott  
RECORDING EQUIPMENT

PHASE SPEAKERS PROPERLY:  
CHANNEL A

Five rotary phase control knobs for Channel A, labeled A, B, 18, 0, and C.

NOTE: CONNECT CABLES TO PROPER  
SPEAKER TERMINALS  
CHANNEL B

Five rotary phase control knobs for Channel B, labeled A, B, 18, 0, and C.

CENTER CHANNEL  
OUTPUT

Two sets of RCA jacks for center channel output, labeled RECORDER A+ and RECORDER B+.

TAPE

Two sets of RCA jacks for tape input, labeled A and B.

TUNER

Two sets of RCA jacks for tuner input, labeled A and B.

MAG HIGH

Two sets of RCA jacks for high magnetic tape input, labeled A and B.

MAG LOW

Two sets of RCA jacks for low magnetic tape input, labeled A and B.

ACCESSORY  
KIT ZSA TOTAL

Power switch and indicator light.

TYPE 222 STEREO AM

EQUALIZATION

NARTB-TAPE



RIAA-NARTB-ORTHO

TREBLE



CROSS OVER CHANNEL A

OUT



IN

SCRATCH FILTER

INPUT SELECTOR

TUNER

PHONO

TAPE



STEREO SELECTOR

STEREO

MONOPHONIC RECORDS

REVERSE STEREO

BAL B

CHANNEL A

BAL A

CHANNEL B



BASS



stereomaster

22 STEREO AMPLIFIER

OUT  
IN



TREBLE



VOLUME-LOUDNESS



SCRATCH FILTER



CHANNEL B

BASS



STEREO BALANCE



LOUDNESS



stereomaster